Installation and Operation Guide





Manual Body #69-4303-071 Copyright © 2021. All rights reserved, Teledyne ISCO Revision E, August 2021

Use and Disclosure of Data Information contained herein is classified as EAR99 under the U.S. Export Administration Regulations.

Export, reexport or diversion contrary to U.S. law is prohibited.

Foreword - Water and Wastewater Products

This instruction manual is designed to help you gain a thorough understanding of the operation of the equipment. Teledyne ISCO recommends that you read this manual completely before placing the equipment in service.

Although Teledyne ISCO designs reliability into all equipment, there is always the possibility of a malfunction. This manual may help in diagnosing and repairing the malfunction.

If a problem persists, call or e-mail Teledyne ISCO technical support for assistance. Simple difficulties can often be diagnosed over the phone. For faster service, please have your serial number ready.

If it is necessary to return the equipment to the factory for service, please follow the shipping instructions provided by technical support, including the use of the Return Merchandise Authorization (RMA) specified. Be sure to include a note describing the malfunction. This will aid in the prompt repair and return of the equipment. No item may be returned for service without a Return Material Authorization (RMA) number issued by Teledyne.

Teledyne ISCO welcomes suggestions that would improve the information presented in this manual or enhance the operation of the equipment itself.

Teledyne ISCO is continually improving its products and reserves the right to change product specifications, replacement parts, schematics, and instructions without notice.

Contact Information

Customer Service

Phone: (800) 228-4373 (USA, Canada, Mexico)

(402) 464-0231 (Outside North America)

Fax: (402) 465-3022

Email: isco.orders@teledyne.com

Technical Support

Phone: Toll Free (866) 298-6174 (Samplers and flowmeters)

Email: iscowatersupport@Teledyne.com

Return

equipment to: 4700 Superior Street, Lincoln, NE 68504-1398

Other Correspondence

Mail to: P.O. Box 82531, Lincoln, NE 68501-2531

Warranty and Operation Manuals can be found on our website at:

www.teledyneisco.com

General Warnings

Before installing, operating, or maintaining this equipment, it is imperative that all hazards and preventive measures are fully understood. While specific hazards may vary according to location and application, take heed of the following general warnings:

∕!\ WARNING

Avoid hazardous practices! If you use this instrument in any way not specified in this manual, the protection provided by the instrument may be impaired.

! AVERTISSEMENT

Éviter les usages périlleux! Si vous utilisez cet instrument d'une manière autre que celles qui sont specifiées dans ce manuel, la protection fournie de l'instrument peut être affaiblie; cela augmentera votre risque de blessure.

Hazard Severity Levels

This manual applies *Hazard Severity Levels* to the safety alerts, These three levels are described in the sample alerts below.

! CAUTION

Cautions identify a potential hazard, which if not avoided, may result in minor or moderate injury. This category can also warn you of unsafe practices, or conditions that may cause property damage.

! WARNING

Warnings identify a potentially hazardous condition, which if not avoided, could result in death or serious injury.

DANGER

DANGER – limited to the most extreme situations to identify an imminent hazard, which if not avoided, will result in death or serious injury.

 $Hazard\ Symbols$

The equipment and this manual use symbols used to warn of hazards. The symbols are explained below.

	Hazard Symbols		
Warnings and Cautions			
<u> </u>	The exclamation point within the triangle is a warning sign alerting you of important instructions in the instrument's technical reference manual.		
<u>A</u>	The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.		
Symboles de sécurité			
<u> </u>	Ce symbole signale l'existence d'instructions importantes relatives au produit dans ce manuel.		
<u>A</u>	Ce symbole signale la présence d'un danger d'électocution.		
Warnungen und Vorsichtshinweis	e		
	Das Ausrufezeichen in Dreieck ist ein Warnzeichen, das Sie darauf aufmerksam macht, daß wichtige Anleitungen zu diesem Handbuch gehören.		
<u>A</u>	Der gepfeilte Blitz im Dreieck ist ein Warnzeichen, das Sei vor "gefährlichen Spannungen" im Inneren des Produkts warnt.		
Advertencias y Precauciones			
	Esta señal le advierte sobre la importancia de las instrucciones del manual que acompañan a este producto.		
<u></u>	Esta señal alerta sobre la presencia de alto voltaje en el interior del producto.		

Table of Contents

Section	on 1 Introduction
1.2 1.3	Operation1-2Design1-2Technical Specifications1-3Replacement Parts and Accessories1-41.4.1 TIENet 301 Device1-4
Section	on 2 Installation and Setup for Signature
2.1	Installation
2.2	2.1.4 Mounting the pH Probe in the Stream
2.3	pH Probe Life
	pH Probe Calibration
2.5	Firmware Updates 2-12
	Probe Storage and Maintenance
	Contact Teledyne Isco
Appe	ndix A Replacement Parts
A.1	Replacement Parts
List	of Figures
	Signature Flow Meter w/ Model 301 TIENet device and pH probe 1-:
	TIENet Device terminal strips
	Installing cable with a cord-grip fitting
	TIENet Device terminal connections
	Position and secure the cable
	How to connect a TIENet plug to the Signature Portable
	Attaching the probe to the carrier
	Character grid
	Menu Tree: 301 Configuration
2-1	0.301 Calibration sequence 2-1

Section 1 Introduction

The TIENet Model 301 pH/temperature sensing device transmits acidity/alkalinity data to the Signature® flow meter using Teledyne ISCO's TIENet connectivity.

The 301 device consists of a wall-mountable isolated interface with a 10 or 23m cable, that attaches to the flow meter. Attached to the device is a stainless steel, submersible probe with combination-type electrodes. The probe has a porous PTFE liquid junction to resist fouling and coating, and a steam-sterilized glass hemi-bulb for long- term stability.

The probe has a standard 25-foot cable, and built-in exposed temperature sensor.

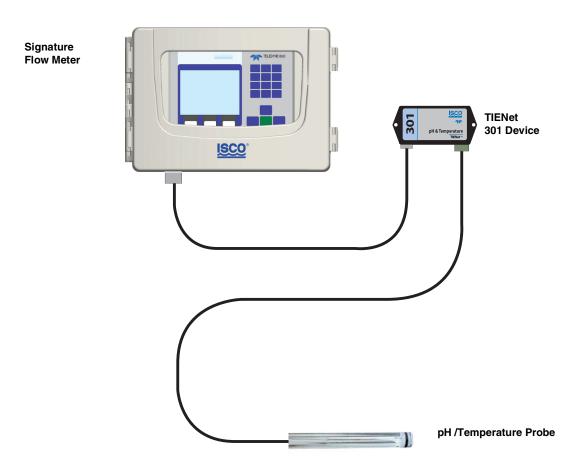


Figure 1-1 Signature Flow Meter w / Model 301 TIENet device and pH probe

For greater distances, external connection via conduit, and connection of additional TIENet devices, the TIENet Expansion Box is available. Bulk TIENet cable may also be used for greater distances

The maximum distance between the 301 and the flow meter is 1,000 ft. (304.8 m).

1.1 Operation

The pH probe measures the acidity or alkalinity of an aqueous solution by determining the relative quantity of dissociated hydrogen ions, H^+ (actually H_3O^+) in the solution. A larger quantity of H^+ ions indicates acidity, while a smaller quantity of H^+ ions indicates alkalinity. The H in pH stands for Hydrogen and the p stands for power.

The normal scale for pH runs from 0 to 14, with 0 being most acidic and 14 being most alkaline. Distilled water at 25° C is neutral at 7, based on the fact that the dissociation constant (number of H^+ and OH^- [hydroxyl] ions present) for pure water at that temperature is 10^{-7} .

The *dissociation constant* is a number indicating the degree of ionic dissociation for a substance after it is dissolved in water. Dissociation constants vary widely for substances, depending on the nature of the substance's chemical bonds. Ionic salts tend to have higher constants.

Each number on the pH scale between 7 and 0 equals a tenfold increase in H^+ ion. Each number between 7 and 14 equals a tenfold decrease of H^+ ion. pH measurements of wastewater are commonly made to monitor the effect of treatment chemicals added to raise or lower the pH.

Water that has been used for various industrial processes may deviate substantially from 7. Chemicals are often added to the water to bring the pH close to that of neutral water, which is 7.

For example, if the effluent has a concentration of heavy metal ions, they must be removed before discharge. Raising the pH of solutions containing transition-metal ions will cause them to precipitate, where they can easily be removed as sludge. The resultant solution will be high in pH and will require acid to neutralize it.

1.2 Design

The pH probe is a combination of two electrochemical half-cells. Together they provide a low-voltage signal that corresponds to the hydrogen-ion concentration of a solution. The bulb at the end of the probe is called the *glass mono electrode*.

The glass is of special composition, sensitive only to hydrogen ions, and is exposed to the solution to be measured. The specific sensitivity to the hydrogen ion prevents interference from other ions that may be present in the solution. It is essential to prevent grease from fouling this membrane. The glass membrane produces an electrical potential proportional to hydrogen ion activity.

The other electrode, called the *reference electrode*, completes the circuit between the glass electrode and the solution.

The ISCO pH probe combines both electrodes in a single housing and also contains an amplifier to reduce the extremely high impedance of the circuit. This improves the reaction of the probe to stray capacitance and reduces interference caused by electrical noise in the vicinity.

Like any other chemical reaction, pH measurement is affected significantly by temperature. Consequently, temperature compensation is provided in the 301. The pH probe has a built-in temperature sensor that is exposed for faster response.

When the ion-selective electrode and the reference electrode are connected to a high-impedance voltmeter and submerged in solution, ions move to the surface of the membrane. The electrical charge on the ions creates a potential difference across the barrier between the solution and the membrane. This potential, or voltage difference, is proportional to the activity of the ions in solution.

The potential, when read by a sensitive voltmeter, translates into a reading of pH. With the Signature flow meter, the voltage is sent first to a preamplifier inside the probe to reduce the impedance of the circuit and improve the signal-to-noise ratio, and then on to the 301 to allow greater operating distance from the flow meter.

Note that pH probes are a consumable item, and not covered under the standard one year warranty.

⚠ CAUTION

Never allow the pH glass bulb to dry out. When storing the probe, always protect the bulb by covering the end with the plastic cap with a moistened sponge or cloth inside.

1.3 Technical Specifications

Table 1-1 Technical Specifications ^a				
TIENet 301 Device				
301 Weight (w/o sensor)	w/ 10m cable: 3.5 lb			
Ambient Operating Temperature	-20 to 50 °C (-4 to 122 °F)			
pH Measurement Range	0 to 14 pH units			
Temperature Compensation	Performed by the 301 device			
pH Accuracy	±0.1 pH units (new probe, freshly calibrated within range)			
pH Probe				
Dimensions	1.12" ∅ ; 6" long, ³ /4 NPT; Cable 25ft			
Body Material	316SST			
pH Electrode Junction	Double porous			
Temperature Measurement Range	0 to 80°C (32 to 176°F)			

a. All specifications are subject to change without notice.

1.4 Replacement Parts and Accessories

Parts and accessories can be purchased by contacting Teledyne ISCO's Customer Service Department.

Teledyne ISCO

Customer Service Dept. P.O. Box 82531 Lincoln, NE 68501 USA Phone: 800 228-4373

402 464-0231 FAX: 402 465-3022

E-mail: isco.orders@Teledyne.com

1.4.1 TIENet 301 Device

301 pH/Temperature Device with Signature connection ending in unterminated leads. For use with Signature 6 position plug-in (green) terminal strip.

Includes cord grip, combination pH probe with built-in exposed temperature probe and 25 ft. probe cable, and one package of each buffer and rinse solution for probe calibration.

10 m cable*	
23 m cable*	
Cut-to-length*	
*Cable lengths from Signature to TIENet 301 device	

301 pH/Temperature Device with Signature connection ending in TIENet plug. For use with portable Signature TIENet receptacle.

Includes combination pH probe with built-in exposed temperature probe and 25 ft. probe cable and one package of each buffer and rinse solution for probe calibration

10 m cable*	60-4307-070
23 m cable*	60-4307-071
Cut-to-length*	60-4307-072
*Cable lengths from Signature to TIENet 301 device	
CA Assembly TIENet Y w/ connector	60-4304-066
TIENet Expansion Box (includes 10 ft TIENet cable and 2 cord grips). 60-4307-023TIENED Box (includes 10 ft TIENet cable and 2 cord grips)	
Cord grip fitting, ³ / ₄ " NPT, for TIENet cable	209-0073-12

✓ Note

Teledyne ISCO uses FreeRTOS version 5.4.2 in its TIENet devices. In accordance with the FreeRTOS license, FreeRTOS source code is available on request. For more information, visit www.FreeRTOS.org.

Section 2 Installation and Setup for Signature

2.1 Installation

External TIENet devices such as the 301 are all electrically connected to the Signature flow meter in the same manner, usually using conduit or cord-grip cable fittings. Multiple external TIENet devices can be connected simultaneously.

2.1.1 Connecting the Cable

Refer to your Signature flow meter manual for instructions on accessing the instrument's interior components.

∕!\ WARNING

Before proceeding, ensure that the flow meter has been disconnected from mains power.

✓ Note

The steps that follow include instructions for installing cord-grip fittings. Some applications will use user-supplied ³/₄" ID conduit for cable routing.

1. Remove one of the 6-position plug-in terminal strip connectors from the case board.

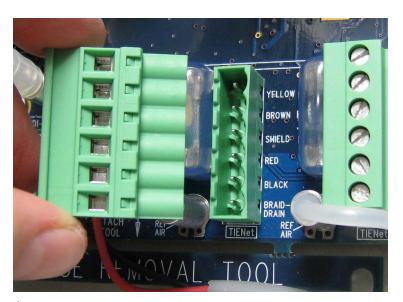


Figure 2-1 TIENet Device terminal strips

- 2. If using a cord-grip fitting, install the cable nut in the appropriate opening on the bottom of the Signature enclosure, securing it to the wall with the lock nut (concave side facing wall).
- 3. Feed the TIENet device cable end through the sealing nut and seal, and through the cable nut. Lightly tighten the sealing nut, just enough to hold the cable in place while installing the connector.

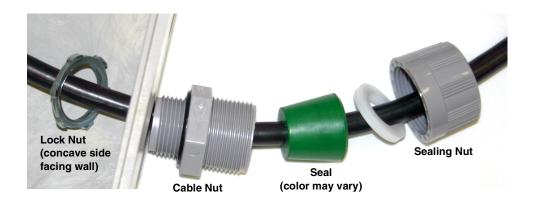


Figure 2-2 Installing cable with a cord-grip fitting

4. Attach the wire ends to the terminal strip as shown in Figure 2-3, then press the terminal strip back down into its socket on the case board, as shown in Figure 2-4, taking care not to strain any wire connections. Gently tug each wire when finished, to verify secure connection to the screw terminals.

✓ Note

The SHIELD wire is the bare drain emerging from the foil shield around the YELLOW and BROWN wires. The BRAID-DRAIN wire is the bare drain emerging from the surrounding braided shield inside the cable jacket. It is not necessary to prevent the two braids from coming into contact with each other.

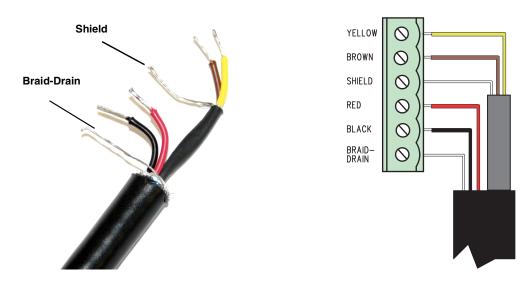


Figure 2-3 TIENet Device terminal connections

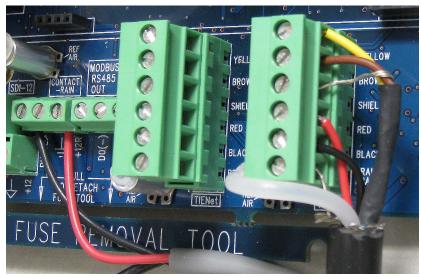


Figure 2-4 Attach wired terminal strip to case board socket





Figure 2-5 Position and secure the cable

- 5. Gently tug the cable downward, to remove any slack within the enclosure, taking care not to put any stress on the connection.
- 6. Tighten the cord grip sealing nut.
- 7. Close the front panel and fasten it shut with the two Phillips screws.

! CAUTION

If you are using conduit instead of the cord-grip fitting, the conduit must be sealed to prevent harmful gases and moisture from entering the Signature enclosure. Failure to seal conduit could reduce equipment life.

2.1.2 Connecting to Signature Portable via a TIENet Receptacle

The optional external TIENet devices compatible with the Signature Portable (and Signature) all scan into the hardware in the same manner. A scan is required anytime a new TIENet device is added.

Multiple TIENet devices can be connected simultaneously to the same Signature Portable Flow Meter. The following TIENet devices will attach to the TIENet receptacle:

- Ultrasonic Level Sensor
- Area Velocity Sensor
- 301 pH Interface
- LaserFlow
- 306 Sampler Interface

Connecting a TIENet plug to the Signature Portable To connect the TIENet plug from the sensor to the TIENet Receptacle:

- 1. Align the connectors and push together (Figure 2-6).
- 2. The sensor release will "click" when the sensor connector is fully seated.
- 3. Connect the two caps together.
- 4. After the physical connection is made, a scan must be performed for the device to be recognized.

For additional TIENet connections, use the TIENet Y-cable or alternately an Expansion Box.

O-Ring and Lubrication for the TIENet receptacle

1. Coat the O-ring's sealing surface with a silicone lubricant.

! CAUTION

Do not use petroleum-based lubricants. Petroleum-based lubricants will cause the O-ring to swell and eventually deteriorate. Aerosol silicone lubricant sprays often use petroleum-based propellents. If you are using an aerosol spray, allow a few minutes for the propellent to evaporate before proceeding.

- 2. The sensor release will "click" when the sensor connector is fully seated.
- 3. Connect the two caps together.





Figure 2-6 How to connect a TIENet plug to the Signature Portable

2.1.3 pH Probe Installation Considerations

Install the probe only in streams that have continuous flow. The sensing end of the probe must always remain wet. For proper operation, there must be enough flow to submerge the sensing end of the probe completely.

✓ Note

For best results, calibrate the probe before each installation. For calibration steps, refer to Section 2.4.

If flow is intermittent (dry for periods of time), the pH sensing bulb will dry out, and its response time will slow, becoming especially problematic in situations where pH changes rapidly. If the probe is dry long enough, it will first lose sensitivity, then be slow to respond, and finally become inoperable. **Never let the sensing end of the probe dry out completely.**

Always mount the probe in an easily-accessible location, as periodic cleaning of the probe will be necessary.

Also, you will eventually need to replace it. The probe can be mounted facing either upstream or downstream, but the carrier mounting is more secure if the probe is facing upstream, due to the stop tabs on the back end.

Remember to unscrew the plastic guard cap from the sensing end of the probe when you install it, or the probe will be unable to sense the flow stream.

Installation in streams with high grease content will result in poor performance and require frequent cleaning and recalibration.

Greasy substances, being nonconductors of electricity, weaken the electrical potentials formed between the glass mono-electrode and the solution, slowing or halting the response altogether.

The pH probe operates satisfactorily mounted either horizontally or vertically in the stream. However, horizontal mounting is more secure, and presents less of a debris trap.

Simple suspension of the probe is not recommended, particularly in streams of high velocity, or those that carry debris.

2.1.4 Mounting the pH Probe in the Stream

If you mount the pH probe vertically, mount it securely. Do not hang it by its cable. Suspending the probe in the stream is not stable.

For horizontal mounting, the probe fastens to a sensor carrier that snaps to an ISCO mounting ring. The carrier has spring clamps that hold the probe in place. Press the probe between the clamps, then push it backward until it stops.

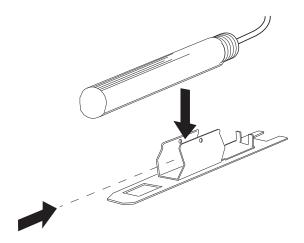


Figure 2-7 Attaching the probe to the carrier

The mounting rings fit various diameters of round pipes 15" diameter and smaller. For larger pipes, use the ISCO Scissors Ring. The mounting rings are held in place by the outward force of spring pressure in the smaller sizes and by a scissors arrangement in the larger sizes. For more detailed information about mounting rings and associated hardware, refer to the ISCO Mounting Rings user manual, and the instruction sheet supplied with the mounting ring. After mounting the probe in the ring or strap, route the cable out of the stream so it will not trap debris or clog the sewer.

✓ Note

When installing the pH probe and its sensor carrier, make sure the mounting slots on the carrier are completely pressed into the mating tabs on the ring. The probe relies on a full engagement between tabs and slots for secure mounting. If the slots are loose against the tabs, the probe may be swept away by the force of the stream.

Lastly, remember to unscrew the rubber guard cap from the sensing end of the probe when it is installed.

2.2 Configuring the 301

To configure the Signature flow meter for operation with a pH

probe using the TIENet 301 device, press Menu ($\boxed{\textbf{B}}$) to access the top menu, and select Hardware Setup. For all TIENet devices including the 301, select TIENet Setup (Smart Sensor).

2.2.1 Updating the Device List

When the 301 is physically added to the system, select Perform Scan so that the flow meter detects it. When the scan is complete, the 301 appears in the list of connected devices, ready to be configured with the steps shown in Figure 2-9 on the following page.

✓ Note

From the Hardware Setup menu, "Configure" refers to defining and selecting the parameters for each connected device.

The default parameters that will appear for the 301 device are:

301 pH - pH reading

301 Temperature – Degrees C

The name of any parameter can be changed by highlighting it and pressing Enter () to display the character grid. Navigate the grid using the arrow keys. Select characters with Enter and clear characters with Delete ().

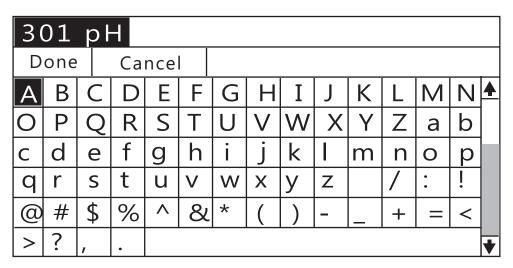


Figure 2-8 Character grid

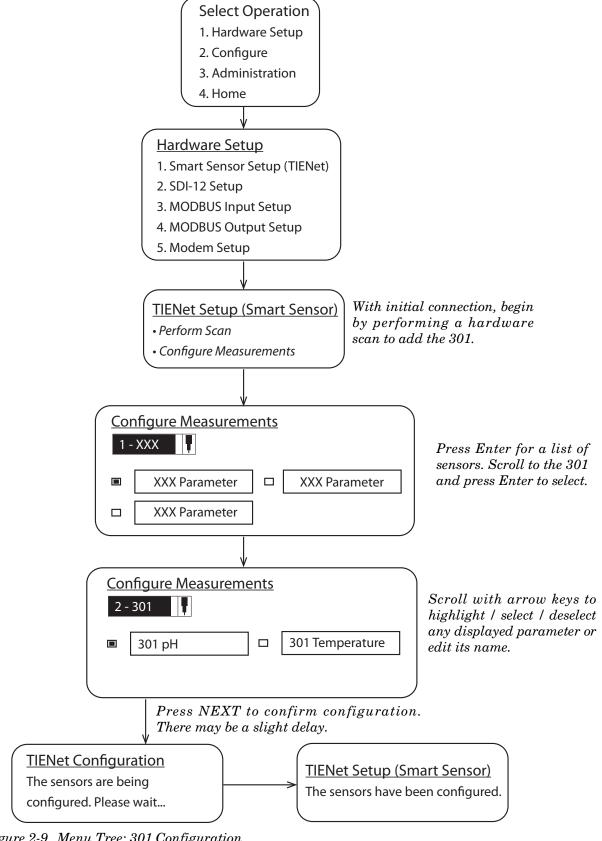


Figure 2-9 Menu Tree: 301 Configuration

2.3 pH Probe Life

pH probes are consumable items, meaning that they will eventually have to be replaced.

During the life of the probe you will have to clean and recalibrate it periodically (For calibration instructions, refer to the next section). Grease and debris will interfere with the probe's ability to accurately measure pH. Because grease is an insulator, it will keep the ions from reaching the glass membrane and porous liquid junction, thus hindering the creation of a voltage potential and slowing or stopping response time.

An indication that the probe is nearing the end of its service life is an increasing time period to stabilize during calibration. This can present a problem in applications with a rapidly changing pH. Consider replacing the probe when delays become apparent.

2.4 pH Probe Calibration

The Signature flow meter provides a calibration procedure for the pH probes using commercially prepared buffer solutions.

2.4.1 Frequency

For accurate readings, you must clean and re-calibrate the probe on a regular basis. Calibration intervals typically range from weekly to monthly, depending on the application.

✓ Note

For pH probe calibration, Teledyne ISCO recommends that you use a glass container for the buffer solutions, and ensure that the following conditions are met:

The probe must be properly submerged in solution, and there must be no air trapped under the probe membrane, or the reading may become incorrect and/or erratic.

2.4.2 Procedure

Rinse the probe. From the Home screen, press the MENU softkey and then follow the sequence shown in Figure 2-10. When the sequence is completed, the buffer list will reappear. Rinse the probe and select the next buffer calibration point or Done. Measurement will resume after five minutes.

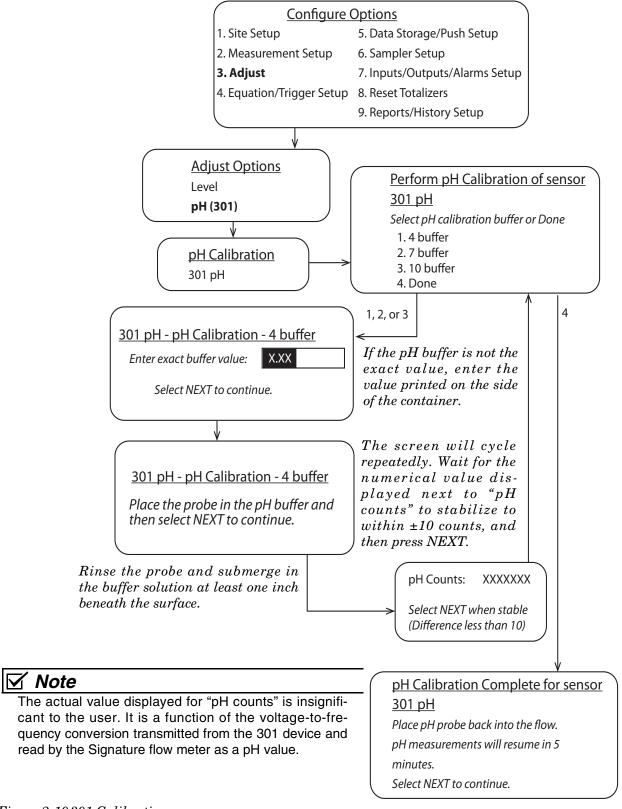


Figure 2-10301 Calibration sequence

2.5 Firmware Updates

The TIENet device's firmware is updated via the USB port on the front panel of the Signature Flow Meter. Step-by-step instructions for updating the firmware can be found in Section 2 of the Signature user manual.

2.6 Probe Storage and Maintenance

If you remove the pH probe from operation, be careful to keep the glass sensor bulb wet. Exposure to air causes the glass membrane on the sensor bulb to dry out. This makes it very slow to respond in solution. Prolonged or repeated dehydration of the bulb will ruin the probe.

The guard cap is to protect the probe during shipment and storage and to keep the glass membrane and liquid junction from drying out. If you remove the probe for any reason, clean it and replace the cap after filling with 4.0 buffer solution. **Never store** the probe dry or without the cap in place.

The pH-sensitive glass can also become "conditioned" to its environment, especially when it is continuously exposed to high pH (10 and above) solutions. The glass does have a memory and will respond slowly when exposed to a lower pH solution after having been in a high pH solution for any significant period of time.

Storage of a pH probe in a 4.0 buffer solution is recommended, as this has a regenerative effect on the glass and does not put a memory on it. Tap water will work if 4.0 buffer solution is not available. Deionized water is good for quick rinses to clean the element, but not for prolonged storage of an electrode. Continuous exposure of the ion-sensitive membrane to a wetted, but non-ionic solution will improperly condition the membrane.

The reference electrode is also adversely affected when allowed to dry out. Salt crystals from the electrolyte or precipitates of the solution measured will form salt bridges either within or on the surfaces of the liquid junction, causing the reference to be less conductive and resulting in a higher reference impedance. This condition will typically worsen until the unit no longer functions. Soaking the reference electrode in a 4.0 pH solution, or tap water if the buffer is not readily available, may bring the reference back to life. Boiling the electrode in 4.0 buffer solution or tap water could revive the electrode in more severe situations. If none of these solutions work, it may be necessary to replace the probe.

2.7 Contact Teledyne ISCO

If you have further questions about the installation, operation, and maintenance of your TIENet device, please contact our service department at:

Teledyne ISCO 4700 Superior St. Lincoln, NE 68504

Phone: 866 298-6174 or 402 464-0231

Fax: 402 465-3022

E-mail: iscowatersupport@Teledyne.com

Appendix A Replacement Parts

A.1 Replacement Parts

Replacement parts are called out in the following illustrations. Replacement parts can be purchased by contacting Teledyne ISCO's Customer Service Department.


Teledyne ISCO

Customer Service Department P.O. Box 82531 Lincoln, NE 68501 USA

Phone: (800) 228-4373 (402) 464-0231 FAX:(402) 465-3022

E-mail: isco.orders@Teledyne.com

A.1.1 301 pH Temperature

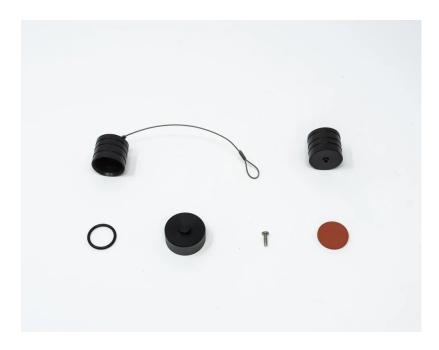

REPLACEMENT PLUG SENSOR CAP KIT FOR 2100 SERIES AND TIENET DEVICES

SKU: 609004469

产品中有毒有害物质或元素的名称及含量

Name and amount of Hazardous Substances or Elements in the product

	有毒有害物质或元素					
部件名称	Hazardous Substances or Elements					
Component Name	铅	汞	镉	六价铬	多溴联苯	多溴二联苯
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
线路板	X	О	О	О	О	О
Circuit Boards	Λ			U	U	
显示	X	О	О	О	О	О
Display	Α	O	0	O	O	O
接线	0	0	О	О	О	X
Wiring	0	O	0	0	0	A
内部电缆	0	О	0	О	О	X
Internal Cables	0	O	0	0	0	A
直流电机	X	О	О	О	О	X
DC Motor	71	O	0	0	0	A
接头	0	0	X	0	О	0
Connectors	0	O	Λ	0	0	O
电池	37	37	37			
Battery	X	X	X	О	О	О
电磁阀	X	0	0	0	0	X
Solenoid valve	21	J	J			71

产品中有毒有害物质或元素的名称及含量:Name and amount of Hazardous Substances or Elements in the product

- O: 表示该有毒有害物质在该部件所有均质材料中的含量均在ST/标准规定的限量要求以下。
- O: Represent the concentration of the hazardous substance in this component's any homogeneous pieces is lower than the ST/ standard limitation.
- X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出ST/标准规定的限量要求。

(企业可在此处,根据实际情况对上表中打"X"的技术原因进行进一步说明。)

X: Represent the concentration of the hazardous substance in this component's at least one homogeneous piece is higher than the ST/ standard limitation.

(Manufacturer may give technical reasons to the "X"marks)

环保使用期由经验确定。

The Environmentally Friendly Use Period (EFUP) was determined through experience.

生产日期被编码在系列号码中。前三位数字为生产年(207 代表 2007 年)。随后的一个字母代表月份:A 为一月,B 为二月,等等。

The date of Manufacture is in code within the serial number. The first three numbers are the year of manufacture (207 is year 2007) followed by a letter for the month. "A" is January, "B" is February and so on.